

ROTHLEY.
200 years of innovation

WINDOW SAFETY BARRIER KIT



1200mm
POLISHED



1800mm
POLISHED



2400mm
POLISHED




1200mm
BRUSHED




1800mm
BRUSHED




2400mm
BRUSHED

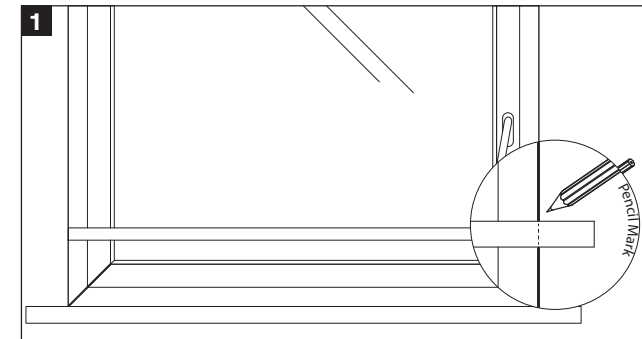


If you need to cut the rail mark it with a pencil

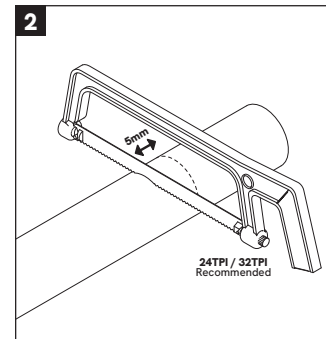


Cut the rail 5mm short of the pencil line

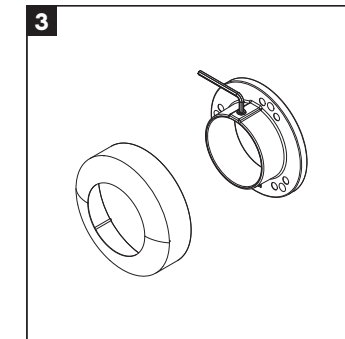


Remove covers and loosen the grub screws

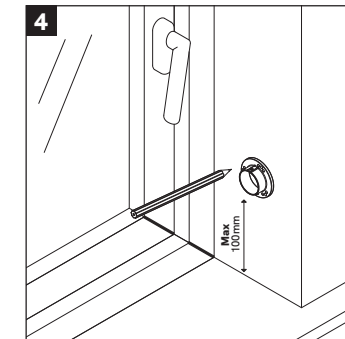


Space between the shelf and rail must be a max of 100mm

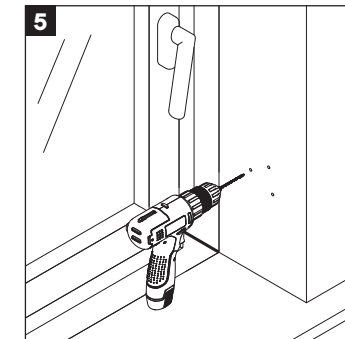


Drill suitable size holes

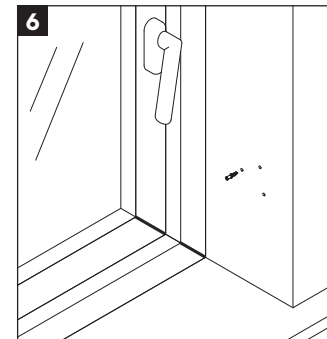


Insert the included fisher wall plugs

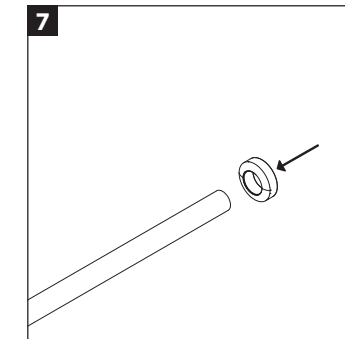


Slide the Sockets and covers onto the rail

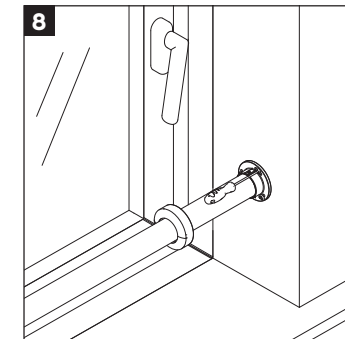

Insert the screws and tighten the grub screw

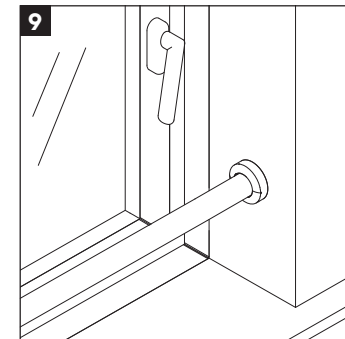

Replace the cover and tighten the retaining screw

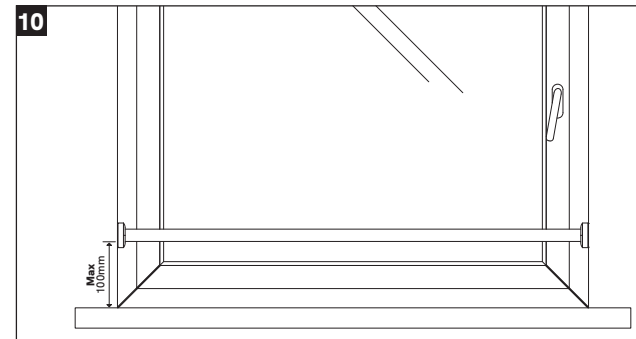

Completed installation

Need Help?
Call 01902 756 461

v1-190525